
RONDA xtratech - Movement cal. X30


User's Manual English

You have decided to buy a watch, which was assembled by a watchmaker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

Description of the display and control buttons Display elements X30 Second hand Minute hand Hour hand Day of the week hand 24-hours counter Date Control buttons Crown

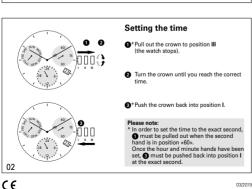

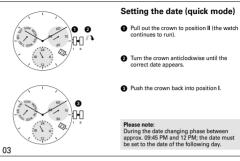



Setting the date, day of the week and time

- Pull out the crown to position III
 (the watch stops).
- 2 Turn the crown anticlockwise until yesterday's day of the week appears.
- Push the crown to position II.
- Turn the crown until yesterday's date appears
- S* Pull out the crown to position III (the watch stops).
 Turn the crown anticlockwise until the correct date and day of the week

appears.

- **Continue to turn the crown anticlockwise until the correct time appears.
- Push the crown back into position I.



- * To set your watch to the exact second, please refer to the chapter entitled «setting the time».
 - ** Please observe the AM/PM clock rhythm.

X